
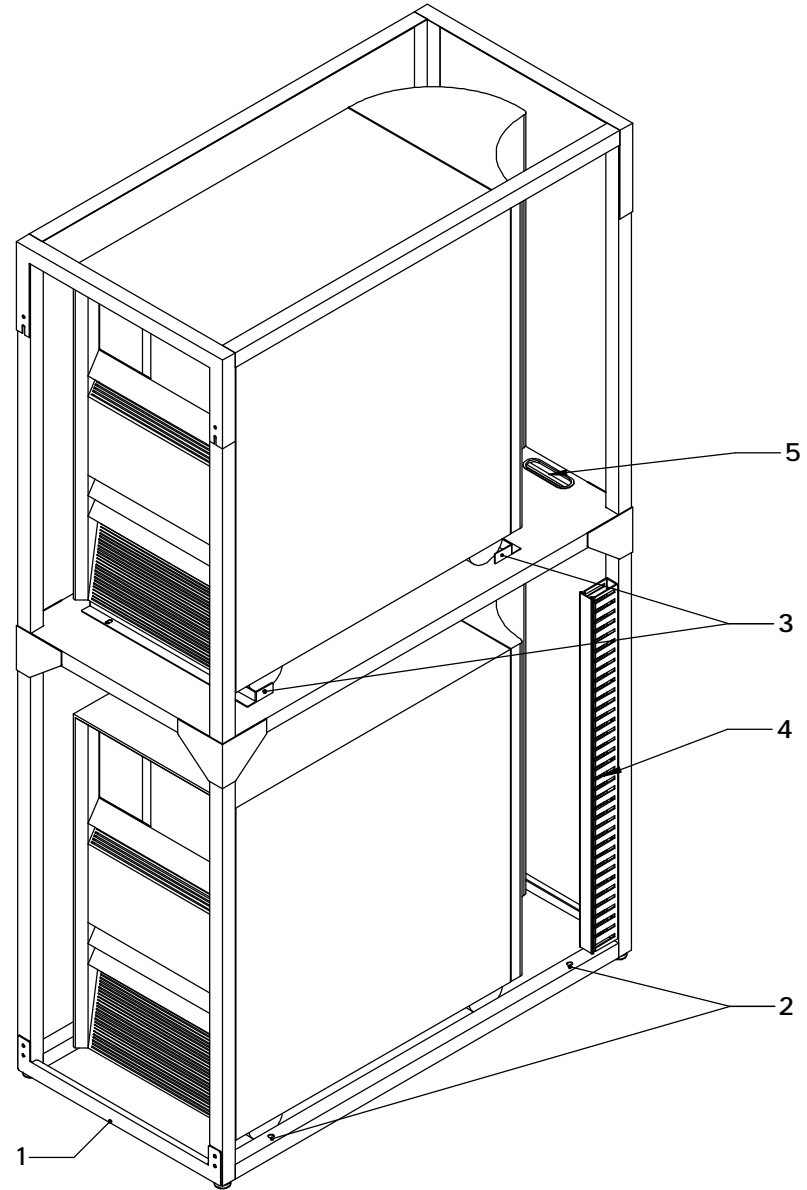
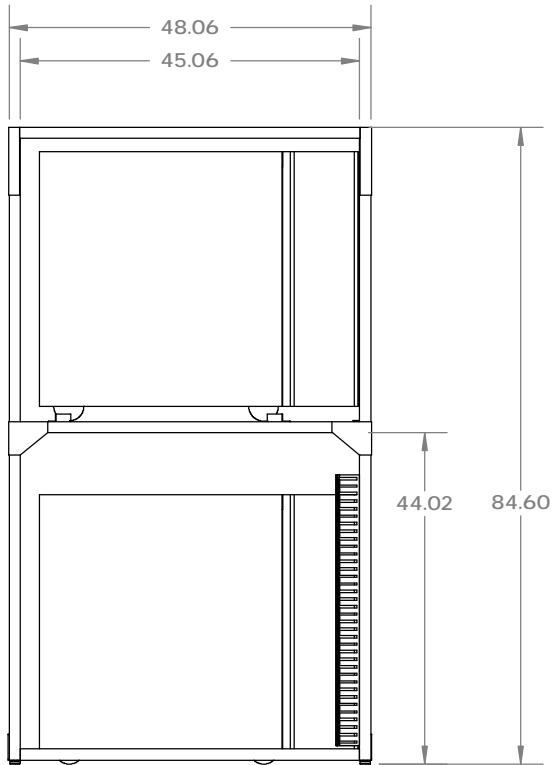
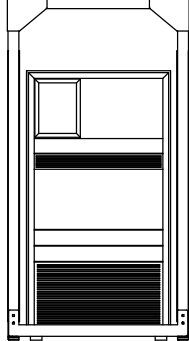
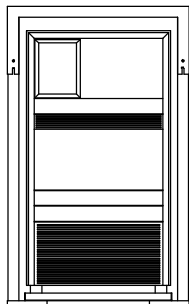
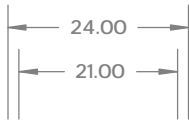


- NOTES:
 1. REMOVABLE FRONT AND REAR BRACE, ALLOWS EQUIPMENT TO BE ROLLED IN AND OUT.
 2. THROUGH HOLES IN CROSS MEMBER FOR SECURING TO FLOOR OR SUB FLOOR
 3. ADJUSTABLE EQUIPMENT STOPS
 4. PANDUIT CABLE TROUGH, BOTH SIDES
 5. OVAL SLOTS FOR PASSING CABLES FROM TOP TO BOTTOM

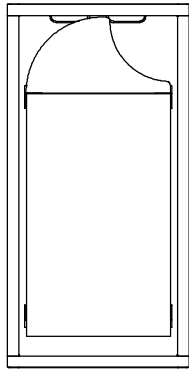

IBM 5065's NOT INCLUDED

CUSTOMER / CONTACT	DESCRIPTION	DRAWN BY:	DATE
	5065 STACKER - SHOWN W/5065's	MSM	05/11/2001